





XL 2085 Bright White

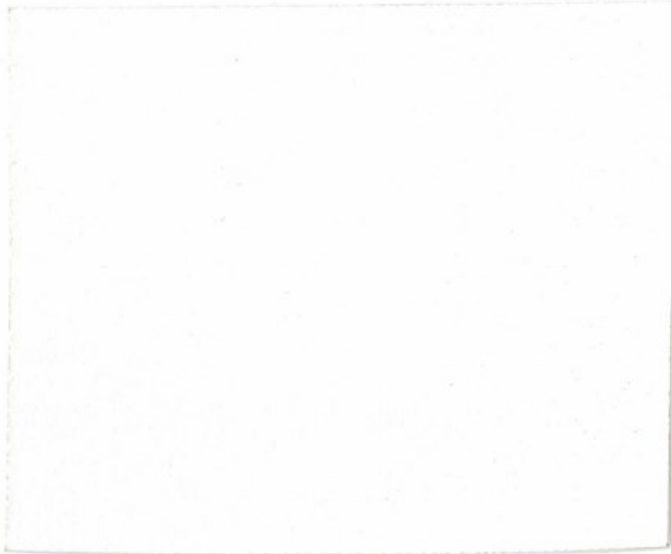

XL 2061 Mocha

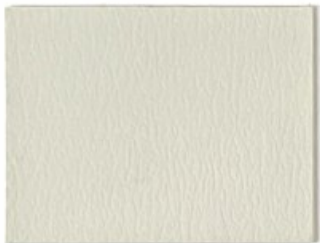

XL 2087 River Rock Gray



XL 2072 Alabaster



XL 2060 Sand Gray



XL 2079 Gunmetal



XL 2074 Taupe



XL 2081 Dove



XL 2067 Sage Green



XL 2086 Forest



XL 2088 Steel Blue



XL 2078 Slate Blue



XL 2089 Midnight Blue



XL 2080 Royal



XL 2090 Adobe



XL 2077 Beige



XL 2083 Claret



XL 2068 Onyx Black

Physical Properties

- Roll Width: 54"
- Roll Length: 25 yards
- Thickness: 60 mils (+/-6 mils)
- Weight per Lin. Yard: 59.3 oz.
- Pattern Repeat: N/A



NAUGAHYDE®

Performance Properties

- Sulfide Stain Resistant
- Ultraviolet Stable Pigment
- Tensile Strength (ASTM D 751): Warp - 100# Minimum, Fill - 100# Minimum
- Tear Strength (ASTM D 751): Warp - 20# Minimum, Fill - 20# Minimum
- Cold Crack (19IA-5874*): Does not crack at -20° F (-29°C) using a 5# roller
- Accelerated Weathering Resistance (SAE J1885): No appreciable discoloration or surface degradation after exposure to 200 kJ/m²
- Abrasion Resistance (19IA-5306*): Does not wear through the surface skin when tested at 4,000 cycles with a 1,000 gm load using an H-18 wheel as an abradant.
- CFFA-1a (Wyzenbeek): Over 200,000 cycles on a #8 cotton duck (heavy canvas/tent material)
- Crocking (19IA-54650*): Test samples show no appreciable wet or dry crocking after 10 double rubs using standard AATCC Crockometer
- Stretch Test PTI #503 (Hot): Samples shows a reading of 102% minimum on UNIROYAL stretch test

Flammability Performance/Flame Retardance

FormFit2 is formulated to meet the small scale flammability test requirements for upholstered materials contained in the following specifications:

- California Technical Bulletin 117 Section E
- FAR 25.853a, Appendix F, Part I(a)(1)(ii)
- CID A-A-2950A Federal Test Method Standard 19IA-5903
- BIFMA, Screen Test 4.6.1.1
- Boston Fire Code IX-1
- MVSS-302

Serviceability

Advanced BeautyGard® protective top coat finish is produced from environmentally friendly materials and processes and is technically formulated to achieve the highest performance standards.

Naugahyde with Advanced BeautyGard® provides outstanding protection in difficult medical and healthcare environments.

This product contains agents to protect it against bacterial and fungal microorganisms.

Cleaning

Most stains and soiling may be removed by using the simple cleaning method:

- For light soiling: A solution of 10% household liquid dish soap with warm water applied with a soft damp cloth will remove most soiling. If necessary, a solution of liquid cleanser and water applied with a soft bristle brush. Wipe away the residue with a water-dampened cloth.